

Telephone:  
Fax:  
VAT Registration No.:

---

<b>Name:</b>	TiXoN DIAG	<b>Manufacturer:</b>	Fiat
<b>Address:</b>		<b>Model:</b>	
		<b>Year:</b>	1998
		<b>Registration:</b>	
<b>Tel - Private:</b>		<b>Mileage:</b>	
<b>Tel - Business:</b>		<b>Job number:</b>	
<b>Tel - Mobile</b>		<b>Date</b>	

---

## System operation

**NOTE: Vehicles supplied with red master key.**

- System arms after switching ignition OFF.
- Switch ignition ON.
- Ensure immobilizer warning lamp flashes briefly [Fig. 3](#).
- Key code not recognised:
- Immobilizer warning lamp remains illuminated.
- Malfunction indicator lamp (MIL) remains ON (petrol engines only).
- System malfunction.

**NOTE: Immobilizer system can be disarmed using 5 digit code from vehicle security card as detailed in the owner's handbook (petrol and 2,4 TD engines only). This may NOT be available in all markets for insurance reasons. [Fig. 3](#)**

## Programming

### When

- System malfunction.
- Key added or replaced.

### How

**NOTE: A minimum of 2 keys must be programmed in addition to the master key.**

- Obtain and reprogram all keys.
- Insert master key into ignition switch.
- Switch ignition ON.
- Ignition MUST be switched OFF immediately after immobilizer warning lamp extinguishes.
- Within 10 seconds:
- Remove master key.
- Insert first key to be programmed into ignition switch.
- Switch ignition ON.
- Ignition MUST be switched OFF immediately after immobilizer warning lamp extinguishes.
- Within 10 seconds:
- Remove key 1.
- Insert second key to be programmed into ignition switch.
- Switch ignition ON.
- Ignition MUST be switched OFF immediately after immobilizer warning lamp extinguishes.

**Manufacturer:** Fiat  
**Engine code:** 182A4.000  
**Tuned for:** R-Cat

**Model:** Brava 1,6  
**Output:** 76 (103) 5750  
**Year:** 1998-00

© Autodata Limited 2006  
15.02.2006  
V6.200- 

- Remove key 2.
- Repeat above procedure immediately to program remaining keys.


**NOTE: A maximum of 7 keys can be programmed using the master key.**

- After programming last key: Within 10 seconds:
- Remove key.
- Insert master key into ignition switch.
- Switch ignition ON.
- Ignition **MUST** be switched OFF immediately after immobilizer warning lamp extinguishes.
- All models except 1,9D JTD:
- Remove master key.
- 1,9D JTD:

**WARNING: If ignition remains OFF for longer than 10 seconds all codes will be erased.**

- Switch ignition ON after 4-9 seconds.
- Switch ignition OFF immediately after immobilizer warning lamp extinguishes.
- Switch ignition ON.
- Immobilizer warning lamp remains illuminated.
- Remove master key.

3

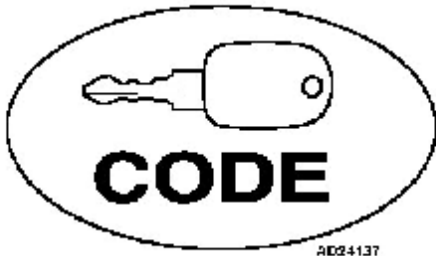

**Manufacturer:** Fiat  
**Engine code:** 182A4.000  
**Tuned for:** R-Cat

**Model:** Brava 1,6  
**Output:** 76 (103) 5750  
**Year:** 1998-00

© Autodata Limited 2006  
15.02.2006  
V6.200- ***/Autodata***